

DIGITAL COASTER PROGRAMMING GUIDE v410

*** You must have a stand-alone Desktop transmitter to reprogram coaster pager numbers. This function will not work with QSR, Radiant or other integrated paging systems.

To change the pager number, follow the procedure below.


- Remove all coasters from one charger base. Place 1 pager at a time on the charger to reprogram the pager number. Once you place the pager on the charger you have 30 seconds to complete the reprogramming. If you pass the 30 seconds and the pager will not reprogram, remove the pager from the charger and start again. Be sure that the charging power supply is plugged in and the red charging light is ON.
- Using your desktop transmitter, enter the OLD pager number.
- Press the “Enter” key. (Press the enter key again, if the display shows “Pre-set Message (1-4)”). On the “Enter Message” window, press * (star) key followed by the **NEW 3 digit number**. Please take note that you need to enter a 3 digit number. (For example: 1 will be equivalent to “001”, 2 will be “002”, “016” will be 16 and so on).
- Press the “send” key. The pager should display the new pager number.



For example, to change pager number 6 to pager number 27

*Press “6 – enter- * 027- send” >>> for transmitter with no Pre-set Message Option*

*Press “6 – enter- enter - *027- send” >>> for transmitter with Pre-set Message Option*

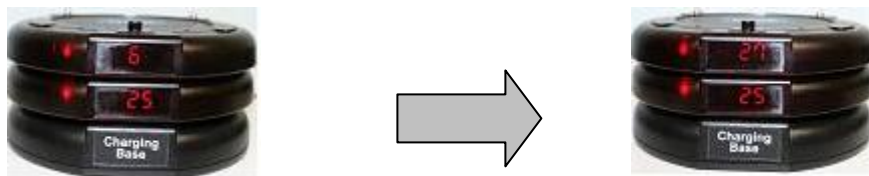

The * Star key is the bottom left key - left side of the zero (0) key.